

Signature Mobile Bottlers Inc.

ELECTRICAL SPECIFICATION

Revised 2/1/05

OUR BOTTLING TRUCKS REQUIRE POWER FROM WINERY.

WE REQUIRE:

- A Cutler Hammer, or equivalent, service disconnect box. Disconnect box may be fused or fuseless.
- Requires 208 or 240 VOLT, 3-PHASE, Capable of 60 amps or larger.
- The box must have dedicated ground wire, and dedicated neutral wire from panel to 2, 4 gauge lugs inside disconnect box.
- Please locate disconnect box within 100 feet of bottling truck.
- We have 130 feet of power cord from our truck to reach the winery.
- INSTALLER NOTE: Please wire 3 hot legs to box, with a separate ground, and neutral wire to lugs. (5 wires total). Each line to disconnect must read 116-120volts to ground, and 208-240 volts line to line.

IF YOUR WINERY DOES NOT HAVE 3-PHASE POWER.

- YOU MAY RENT A GENERATOR FROM A LOCAL EQUIPMENT RENTAL COMPANY.
- The Generator should be at least a 40 Kilowatt Unit.
- 208 or 240 3-PHASE, @ 60 AMPS.
- We will hook a pigtail to generator lugs, then plug the truck into the pigtail.
- THE EQUIPMENT COMPANY WILL USUALLY DELIVER AND PICK UP FOR YOUR CONVENIENCE.

ANY QUESTIONS? CALL 1-888-268-8548. DAVID SCHOLZ